

für Autohäuser for Car-Dealers



*Von Experten für Experten
From Experts for Experts*

Alfa
BMW
Chrysler
Daihatsu
Ferrari
Fiat
Ford
Kia
Honda
Hyundai
Jaguar
Lamborghini
Landrover
Maserati
Mercedes
Mitsubishi
Nissan
Infiniti
Lancia
Opel
Porsche
Peugeot
Citroen
Renault
Dacia
Saab
Rolls Royce
Bentley
Volvo
Subaru
Suzuki
Toyota
Lexus
Skoda

S Service Info

Alfa Romeo / Lancia

Zentriersatz
Alfa Romeo /
Lancia

Best-#:
280 400 085

Centering Kit
Alfa Romeo /
Lancia

Part-#:
280 400 085



165 400 001



165 400 002



241e 801 409



251e 801 409

5x271 994 121

Zentriertabelle Centering Chart

Felgendaten Vehicle Data	Mittenloch / Centerbore HAWEKA-#	Lochkreis / Bolt Circle HAWEKA-#
Alfa Romeo	Bolzen / Studs	5 x 271 994 121
156('97-'05)/147('00-'10)/164('87-'97)/GTV('94-'05)/Spider ('96-'05)/GT Coupé('04-'10)/Crosswagon Q4('04-'05) /Sportwagon Q4('00-'05)	58 165 400 001	5x98 251e801 409
33('83-'93)/145('94-'00)/146('95-'00)/155('92-'96)/164 TS, STS('87-'97)/MiTo('08-)	58 165 400 001	4x98 241e801 409
90('84-'86)/75('85-'91)/Spider(7/'92-'96)	58 165 400 001	4x108 241e801 409
166 ('98-'07)	58 165 400 001	5x108 251e801 409
159('05-)/Brera('05-'10)/Spider('06-'10)/Giulietta('10-)	65 165 400 002	5x110 251e801 409
Lancia		
Dedra('89-'00)/Thema('84-'94)/Ypsilon('95-)/Delta('79-)/Beta ('72-'84)/Lybra('99-'05)/Musa('04-)	58 165 400 001	4x98 241e801 409
Zeta('94-'02)/Phedra('02-'10)	58 165 400 001	5x98 251e801 409
Gamma('76-'84)/Kappa('94-'00)/Thesis('02-'09)	58 165 400 001	5x108 251e801 409

S Service Info

BMW / BMW i / Mini / Rolls Royce



160 400 069




160 400 072
BMW-#: 8124 2 350 543



211e201 400
PCD: 4x100/5x120



251e208 400
PCD: 5x112/5x120
BMW-#: 8124 2 350 542

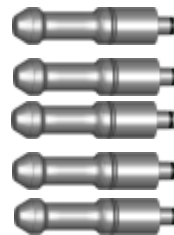

5 x 271 994 208

Zentriersatz
BMW/BMW i/
Mini/RollsRoyce

Best-#:
280 400 119

Part-#:
280 400 119

Optional für/for
P-Radauswuchtmaschinen
P-Wheel-Balancers



163 008 012
Griffstück / Handle
Hofmann/JBC/Sicam/Beissbarth/
Bosch/Nussbaum/Corghi/Mondolfo



163 589 008
Griffstück / Handle
Cemb/Hofmann Megaplan/
Tip Top Probalance

Zentriertabelle Centering Chart

Vehicle Data	Centerbore		Bolt Circle
	HAWEKA-#		HAWEKA-#
BMW / BMW i / Mini / Rolls-Royce			
1, 3, 5, 6, 7, 8 / Z3 / Z4 / X3 / X5 / GT / Mini Countryman / Paceman	72,5mm 160 400 069		5x120 211 201 400
315-325er (-92) Z1	57mm 160 400 069		4x100 211 201 400
Z8	74mm 160 400 069		5x120 211 201 400
Mini One / Cooper / John Cooper Works / Clubman / Cabrio	56mm 165 400 069		4x100 211 201 400
X5M / X6 / X6M	Front axle 72,6mm 160 400 069	Rear axle 74,1mm 160 400 069	5x120 211 201 400
i3 / i8 / Mini (<03/2014)	66,5mm 160 400 072		5x112 251 208 400
Rolls-Royce (alle modelle / all models 1997>)	72,5mm 160 400 069		5x120 211 201 400

S Service Info

Chrysler

Zentriersatz
Chrysler

Best-#: 280 400 086

Centering Kit
Chrysler

Part-#: 280 400 086



165 400 001



165 400 002



160 400 063



160 400 064



5x273e008 006



259 010 400

Zentriertabelle Centering Chart

Felgendaten Vehicle Data	Mittenloch / Centerbore HAWEKA-#	Lochkreis / Bolt Circle HAWEKA-#
Chrysler		
ES('88-'91)/GS('88-'91)/Le Baron('-'95)/Neon('94-'05)/Sebring('-'06)/Stratus('95-'01)/PT Cruiser('00-'10)/Cirrus ('95-'00)/Saratoga('89-'95)	57 165 400 001	5x100 259 010 400
Sebring Coupé (USA) ('95-'05)/Sebring('07-)	67 165 400 002	5x114,3 259 010 400
Voyager('84-'07)/300 M('99-'04)/NewYorker('94-'96)/Newport('-'81)/Concorde('93-'04)/Cordoba('75-'83)/ Town&Country ('90-'07)/LHS('94-'01)/GrandVoyager ('87-'07)/Intrepid('93-'04)/Prowler	71,5 160 400 063	5x114,3 259 010 400
300('05-)/300C('05-)	71,5 160 400 063	5x115 259 010 400
Crossfire('04-'07)	66,5 165 400 002	5x112 259 010 400
Imperial/Pacifica('04-'07)/Grand Voyager('08-)/Town&Country('08-)	71,5 160 400 063	5x127 259 010 400
Aspen('06-'08)	78 160 400 064	5x139,7 259 010 400

S Service Info

Daihatsu



165 400 001



150 400 009



241e801 409



251e901 409

5x271 994 121

Zentriersatz
Daihatsu

Best-#:
280 400 088

Centering Kit
Daihatsu

Part-#:
280 400 088

Zentriertabelle Centering Chart


Felgendaten Vehicle Data	Mittenloch / Centerbore HAWEKA-#	Lochkreis / Bolt Circle HAWEKA-#
Daihatsu	Bolzen / Studs	5 x 271 994 121
Charade('93-'00)/Applause('89-'00)/ GranMove('97-'02)	56 165 400 001	4x100 241e801 409
Sirion(98-)/YRV('00-'05)/Pyzar(96-'02)/ Cuore('99-) /Copen('02-)/Extol/Hijet/Move('95-)/ Trevis('06-'09) /Materia('06-)/Charade('03-)	54 165 400 001	4x100 241e801 409
Terios('97-)	66,5 150 400 009	5x114,3 251e901 409

S Service Info


Ferrari



165 400 002

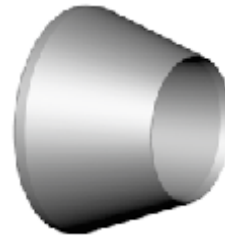

150 400 008



5x273e008 006



259 010 400

Zentriersatz
Fearrai

Best-#:
280 400 089

Centering Kit
Ferrari

Part-#:
280 400 089

Zentriertabelle Centering Chart

Felgendaten Vehicle Data	Mittenloch / Centerbore HAWEKA-#	Lochkreis / Bolt Circle HAWEKA-#
Ferrari		
456 GT('93-'04)/360 Modena, Spider('99-'05)/550 Maranello, Barchetta('96-'01)/F355('94-'99)/Challenge Stradale('03-'05)/F430('04-'09)/575M Maranello('02-'06)/ 575M Superamerica('05)/612 Scaglietti('04-)	67 165 400 002	5x108 259 010 400
308('75-'85)/512 Gino('-84)/F 4 MD	-	5x108 259 010 400
F40('87-'92)/F50('96-'97) (Zentralverschluß/Central locker)/ Enzo('02-'04)	66 165 400 002	-
Mondial('80-'93)/348 TB, TS('89-'94)/Testarossa('84-'96)/512 TR('91-'94)/328 GTB, GTS('85-'89)	43 150 400 008	5x108 259 010 400

S Service Info

Fiats




165 400 001



165 400 002



150 400 009



5x273e008 006



259 010 400



241e801 409
4 x 271 994 121

Zentriersatz
Fiat

Best-#:
280 400 090

Centering Kit
Fiat

Part-#:
280 400 090

Zentriertabelle Centering Chart

Felgendaten Vehicle Data	Mittenloch / Centerbore HAWEKA-#	Lochkreis / Bolt Circle HAWEKA-#
Fiats	Bolzen	4 x 271 994 121
Brava('95-'01)/Bravo('95-)/Barchetta('95-'05)/Coupé('94-'00)/Marea('96-'02)/Palio('96-'00)/Multipla('99-)/Seicento('98-'09)/Tempra('90-'96)/Cinquecento('92-'98)/Punto('93-'07)/ Tipo('88-'95)/Stilo('01-'07)/Doblo('01-'09)/Uno('83-'93)/Panda('80-)/Croma('-96)/Regata('83-'89)/Fiorino('77-)/Qubo('08-)/Strada('-88)/Strada Pick-up('99-)/Idea('03-)/ 500('07-)/Linea('07-)	58 165 400 001	4x98 241e801 409
Ulysse('94-'10)/Scudo(-09/'06)/Dobló('10-)	58 165 400 001	5x98 259 010 400
Gande Punto('05-)/Punto Evo('09-)	56,5 165 400 001	4x100 241e801 409
Scudo(10/'06-)	65 165 400 002	5x108 259 010 400
Croma('05-)	65 165 400 002	5x110 259 010 400
Sedici('06-)	60 165 400 001	5x114,3 259 010 400
Ducato(-02/'94)/Talento(-02/'94)	72 150 400 009	5x118 259 010 400
Ducato(03/'94-)	71 150 400 009	5x118 259 010 400
Ducato (03/'94-)	78 150 400 009	5x130 259 010 400

S Service Info

Ford (Europa/Europe)

Zentriersatz
Ford
(Europa/Europe)

Best-#:
280 400 091

Centering Kit
Ford
(Europa/Europe)

Part-#:
280 400 091



165 400 001




165 400 002



259 010 400



241e801 409
4 x 271 994 121



5x273e008 006



150 400 091

S Service Info

Ford (Europa/Europe)

Zentriertabelle Centering Chart

Zentriersatz
Ford
(Europa/Europe)

Best-#:
280 400 091

Centering Kit
Ford
(Europa/Europe)

Part-#:
280 400 091

Felgendaten	Mittenloch / Centerbore	Lochkreis / Bolt Circle
Vehicle Data	HAWEKA-#	HAWEKA-#
Ford Europa / Europe	Bolzen / Studs	4 x 271 994 121
Ka('09-)	58 165 400 001	4x98 241e801 409
Aspire('94-'97)/ZX2('98-'03)	54 165 400 001	4x100 241e801 409
Mustang(-'93)/Escort(-'00)/Orion(-'94)/Sierra(-'93)/Fiesta (76-)/Fusion('02-)/Courier(-'03)/Express(-'99)/Cougar('98-'02)/Scorpio(1/'95-'98)/Mondeo('93-11/'00)/Mondeo Turnier ('93-11/'00)/Focus(-11/'04)/Focus Turnier ('98-'04)/Focus RS('02-'04)/Focus ST('02-'04)/Focus US-Version('00-)/Ka(-'08)/Puma('97-'02)/Contour('94-'00)/Streetka('03-'05)/ Sportka('03-'08)	63,3 165 400 002	4x108 241e801 409
Mondeo(12/'00-)/Mondeo Turnier(12/'00-)/Focus C-Max ('03-04/'07)/C-Max(05/'07-)/Taurus(-'07)/Thunderbird(-'05)/ Windstar(-'03)/Transit Connect('03-)/Tourneo Connect('03-)/Focus(12/'04-)/Focus Turnier('05-)/Focus RS('09-)/Focus ST('05-)/S-Max(06/'06-)/Galaxy(07/'06-)/Kuga('08-)	63,3 165 400 002	5x108 259 010 400
Galaxy(-06/'06)	57 165 400 001	5x112 259 010 400
Granada(-'85)/Scorpio(-'94)	63,3 165 400 002	5x112 259 010 400
Five Hundred('04-'07)/Freestar('04-'07)/Freestyle('05-'07)/ Taurus('08-)	63,3 165 400 002	5x114,3 259 010 400
Explorer('90-)/Explorer SportTrac('01-)/Crown Victoria('92-)/ Mustang('94-)/GT('04-'06)/Ranger US-Version('83-)/Edge('06-)	70,5 165 400 002	5x114,3 259 010 400
Escape('01-)/Probe('93-'98)/Maverick('00-'07)/Fusion US-Version('05-)/Flex('08-)	67 165 400 002	5x114,3 259 010 400
Ranchero(-'79)/Fairmont(-'83)/Fairland		5x114,3 259 010 400
Transit('92-)	139 150 400 091	6x180 150 400 091
Transit (- '91)	130 150 400 091	6x169,9 150 400 091
Transit ('92-)/Transit Tourneo('92-)/ Transit Euroline(01/'00-)/Transit Express Line(01/'00-)/ Transit Nugget(01/'00-)	65 165 400 002	5x160 259 010 400

S Service Info

Honda



150 400 111



150 400 112



150 400 113



241e801 409



251e901 409

5 x 271 994 121

Zentriersatz
Honda

Best-#: 280 400 124

Centering Kit
Honda

Part-#: 280 400 124

Zentriertabelle Centering Chart

Vehicle Data	Centerbore HAWEKA-#	Bolt Circle HAWEKA-#
Honda		
Civic('84-'05)/Prelude('83-'92)/Accord(-'88)/Logo('96-'01)/ Insight('99-)/Concerto('89-'94)/Jazz('02-)/CRX('83-'98)/Integra('-01)/Fit('01-)	56 150 400 111	4x100 241e801 409
Accord('89-'99)/Prelude(02/'92-'02)/Civic MB6,MC2('-01)/ Legend('-91)/Ascot('89-'93)	64 150 400 112	4x114,3 241e801 409
Shuttle('95-'01)/CR-V('96-)/Accord('00-)/Accord Type-R, CG2('97-'02)/Prelude VTEC('-02)/Integra Type-R('98-'01)/ Stream('01-)/HR-V('99-'05)/Civic('06-)/Civic Type-R('01-)/ Civic Sport('01-'06)/FR-V('05-'09)/Lengend('92-'06)/NSX ('90-'05) (Hinterachse)/Odyssey('95-'04)/S2000 ('99-'09) (Hinterachse)/Element('03-)/Pilot('02-'08)/CR-Z('10-)	64 150 400 112	5x114,3 251e901 409
NSX ('90-'05) (Vorderachse)/S2000 ('99-'09) (Vorderachse)	70 150 400 113	5x114,3 251e901 409
Odyssey('05-)/Ridgeline('05-)/Legend('07-)/Pilot('09-)	64 150 400 112	5x120 251e901 409

S Service Info

Hyundai



165 400 001



165 400 002



160 400 060



250e102 400



231e505 403



241e801 409
4 x 271 994 121



160 400 062

6 x 271 804 014

Zentriersatz
Hyundai

Best-#:
280 400 093

Centering Kit
Hyundai

Part-#:
280 400 093

Zentriertabelle Centering Chart

Felgendaten Vehicle Data	Mittenloch / Centerbore HAWEKA-#	Lochkreis / Bolt Circle HAWEKA-#
Hyundai	Bolzen / Studs Bolzen / Studs	6x271 804 014 4x271 994 121
Getz('02-'09)/Accent('00-)/Atos('98-'08)/i10('08-)/i20('08-)	54 165 400 001	4x100 241e801 409
Sonata('05)/Lantra('91-'00)/Accent('94-'99)/Atos('01)/Matrix('01-'10)/Coupé('02)/Santamo('96-'03)/Tiburon('02)/Elantra('00-'06)/Pony('89-'94)/Excel('89-'94)	67 165 400 002	4x114,3 241e801 409
H 100('01)/H-1('98-'00)/Starex('98-'00)/Coupé('02-'09)/Trajet('00-'08)/XG('98-'05)/Tibiron('02-'08)/Santa Fe('01-)/Tucson('05-'10)/Sonata('05-)/Azera('06-)/i30('07-)/Elantra('07-)/Grandeur('05-)/Genesis('08-)/ix35('10-)/ix55('07-)/Veracruz('06-)	67 165 400 002	5x114,3 231e505 403
H 100('01-)/H-1(1/'01-'07)/Starex('01-'07)	67 165 400 002	5x120 250e102 400
H-1('08-)/Grand Starex('08-)	92,5 160 400 060	6x139,7 231e505 403
Terracan('01-'06)/Galloper('91-'03)	110,5 160 400 062	6x139,7 231e505 403

S Service Info

Jaguar



160 400 004



160 400 064



251e801 409
5x271 994 121

Zentriersatz
Jaguar

Best-#:
280 400 125

Centering Kit
Jaguar

Part-#:
280 400 125

Zentriertabelle Centering Chart

	Centerbore	Bolt Circle
Vehicle Data	HAWEKA-#	HAWEKA-#
Jaguar		Studs: 271 994 121
Alle Modelle/all models/XJ('03)/XJR('03)/XK('96-'06)/XKR ('96-'06)	73,8 160 400 064	5x120,65 251e801 409
X-Type/S-Type/XJ('03-)/XJR('03-)/XF('08-)/XFR('09-)/XK('07-)/ XKR('07-)	63,3 160 400 004	5x108 251e801 409

S Service Info

Kia



150 400 111
52.5-61.0mm



150 400 112
61.5-70.0mm



241 801 409



251e613 409
6 x 271 904 112

Zentriersatz KIA

Best-#: 280 400 095

Centering Kit KIA

Part-#: 280 400 095

Zentriertabelle Centering Chart

Felgendaten	Mittenloch / Centerbore	Lochkreis / Bolt Circle
Vehicle Data	HAWEKA-#	HAWEKA-#
Kia	Bolzen	4 x 271 994 121
Sephia('92-'99)/Mentor('-01)/ Leo/Rio('00-)/Picanto('04-)	54 165 400 001	4x100 241e801 409
Shuma('97-'04)	56 165 400 001	4x100 241e801 409
Pride('-00)	60 165 400 001	4x114,3 241e801 409
Magentis('01-'04)/Joice('99-'03)/Carens(- '06)/Clarus('96-'01)/ Cerato('04-'07)/Optima('00- '05)/Spectra ('04-'09)	67 165 400 002	4x114,3 241e801 409
Carnival('99-'05)/Sedona('05)/ Opirus('02- '10)/Sportage('05-)/Amanti('02-'10)/ Magentis('05-'10)/Optima('06-'10)/ Cee'd('07-)/Carens('06-)/Rondo('06-)/Sorento('10-)/ Soul('08-)/Venga('09-)/Forte('08-)	67 165 400 002	5x114,3 231 505 403
Borrego('08-)	67 165 400 002	6x114,3 231 505 403

S Service Info

Lada



160 400 055



240e107 400
4 x 270 804 003

Zentriersatz
LADA

Best-#:
280 400 xxx

Centering Kit
LADA

Part-#:
280 400 xxx

Zentriertabelle Centering Chart

Felgendaten	Mittenloch / Centerbore	Lochkreis / Bolt Circle
Vehicle Data	HAWEKA-#	HAWEKA-#
Lada	Bolzen / Studs	4 x 270 804 003
Niva (2104) / Samara (VAZ2108) / Forma (VAZ2108)	58,6 160 400 055	4x98 240e107 400

S Service Info

Lamborghini



165 400 001



165 400 003



5x273e008 006

259 010 400

Zentriersatz
Lamborghini

Best-#:
280 400 096

Centering Kit
Lamborghini

Part-#:
280 400 096

Zentriertabelle Centering Chart

Felgendaten Vehicle Data	Mittenloch / Centerbore HAWEKA-#	Lochkreis / Bolt Circle HAWEKA-#
Lamborghini		
Murciélago	70,1 165 400 003	5x120,65 251e901 409
Gallardo	57,1 165 400 001	5x112 251e901 409
Countach/Diablo/Miura	70,1 165 400 003	5x120 251e901 409

Land Rover



150 400 112



150 400 113


 241e801 409
5 x 271 804 121

 251e901 409
5x271 994 121

**Zentriersatz
Land Rover**
**Best-#:
280 400 127**
**Centering Kit
Land Rover**
**Part-#:
280 400 127**

Zentriertabelle Centering Chart

Vehicle Data	Centerbore HAWEKA-#	Bolt Circle HAWEKA-#
Land Rover		
Discovery II (1999-2004) / Range Rover II (1995-2002)	70mm 150 400 113	5x120 251e901 409
Discovery III (2004-2009) / Discovery IV (2009-) / Range Rover III (2002-) / Range Rover Sport (2005-)	72,5mm 150 400 113	5x120 251e901 409
Freelander I (1998-2006)	64mm 150 400 112	5x114,3 251e901 409
Freelander II (2007-) / Range Rover Evoque (2010-)	63,3mm 150 400 112	5x108 251e801 409

S Service Info

Maserati



165 400 001



165 400 002



5x273e008 006

259 010 400

Zentriersatz
Maserati

Best-#:
280 400 097

Centering Kit
Maserati

Part-#:
280 400 097

Zentriertabelle Centering Chart

Felgendaten Vehicle Data	Mittenloch / Centerbore HAWEKA-#	Lochkreis / Bolt Circle HAWEKA-#
Maserati		
GranSport('02-'07)	56 165 400 001	5x108 259 010 400
3200 GT('98-'01)/Spyder('01-'07)/Coupé('01-'07)	67 165 400 002	5x108 259 010 400
Ghibli/Quattroporte/Shamal	67 165 400 002	5x120,65 259 010 400
Quattroporte('03-)/GranTurismo('07-)	67 165 400 002	5x114,3 259 010 400

S Service Info

Mazda



165 400 001



165 400 002



160 400 060



160 400 062



241e801 409
4 x 271 994 121



231e505 403
6 x 271 804 014

Zentriersatz
Mazda

Best-#:
280 400 099

Centering Kit
Mazda

Part-#:
280 400 099

Zentriertabelle Centering Chart

Felgendaten	Mittenloch / Centerbore	Lochkreis / Bolt Circle
Vehicle Data	HAWEKA-#	HAWEKA-#
Mazda	Bolzen / Suds	4 x 271 994 121
	Bolzen / Suds	6 x 271 804 014
323('90-'03)/MX-3('91-'98)/MX-5('-05)/MX-5 Miata(-'05)/121('-96)/Demio('98-'03)/Protegé('90-'01)/2('07-)	54 165 400 001	4x100 241e801 409
121('96-'03)/2('03-'07)	63,3 165 400 002	4x108 241e801 409
121 DA('88-'91)/626('88-'91)	60 165 400 001	4x114,3 241e801 409
626('92-'02)/Xedos 6('92-'99)/Xedos 9('93-'02)/RX-7('-02)/MPV('-06)/Premacy('99-'05)/Tribute('00-'03)/929('-98)/MX-6('-97)/6('02-)/323 2.0 Sportive,V6('01-'03)/Millenia('93-'03)/Protegé('02-'03)/RX-8('03-)/3('03-)/5('05-)/MX-5('06-)/MX-5 Miata('06-)/CX-7('06-)/CX-9('07-)	67 165 400 002	5x114,3 231 505 403
B-Serie('-06)/BT-50('06-)/E-Serie	93 160 400 060	6x139,7 231 505 403
B-Serie('-06)	110 160 400 062	6x139,7 231 505 403

S Service Info

Mercedes Sprinter - standard and twin tires -

Centering Kit Mercedes Sprinter

Part-#:
280 400 122

consisting of:

- Centering Disc incl. Distance Spacer - 84mm / 161mm
Part-#: 280 400 027
- Flange Plate
PCD: **6x 120 / 125 / 130**
Part-#: 260 301 400
- 3-Arm-Star
PCD: **3 x 170 / 184,15 / 200**
205 / 222,25
Part-#: 700e400 018
- Studs for 3-Arm-Stern
Part-#: 700 008 018 (-12/06)
Part-#: 700 008 025 (01/07-)



280 400 027



260 301 400



700 008 018

700e400 018



700 008 025

Zentriertabelle Centering Chart

	Centerbore	Bolt Circle
Vehicle Data	HAWEKA-#	HAWEKA-#
Mercedes		
Sprinter (01/06-)	84mm 280 400 027	6x130 260 301 400
LLKW-Serien 400, 500, 600, 700 / T1 / T2 / Sprinter 3500	161mm 280 400 027	6x205 700e400 018 + Studs / Bolzen

S Service Info


Mercedes PKW / Cars Smart




160 400 051



160 400 071

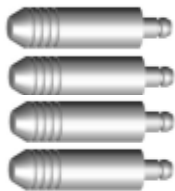

241e304 400
4x271 804 014

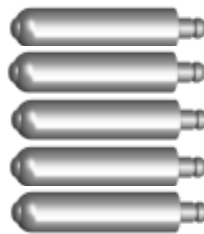

251e603 400
5x271 994 002

Zentriersatz
Mercedes

Best-#:
280 400 081

Centering Kit
Mercedes

Part-#:
280 400 081

Zentriertabelle Centering Chart

Vehicle Data	Centerbore HAWEKA-#	Bolt Circle HAWEKA-#
Mercedes / Smart		
A-/B-/C-/E-/R-/S-/M-/V-Klasse SLK / Vaneo / Viano / Vito	66,5mm 160 400 051	5x112 251e603 400
G-Modelle / Sprinter (-12/05) / Serie 200, 300	84mm 160 400 051	5x130 251e603 400
Citan	60mm 160 400 071	5x108 251e603 400
Smart Fortwo	57mm 160 400 071	3x112 241e203 400
Smart Forfour	67mm 160 400 051	4x114,3 241e203 400

S Service Info

Mitsubishi



165 400 001



165 400 002



160 400 064



160 400 062



150 400 091



241e801 409
4 x 271 994 121



231e505 403
6 x 271 804 014

Zentriersatz
Mitsubishi

Best-#:
280 400 098

Centering Kit
Mitsubishi

Part-#:
280 400 098

Zentriertabelle Centering Chart

Felgendaten Vehicle Data	Mittenloch / Centerbore HAWEKA-#	Lochkreis / Bolt Circle HAWEKA-#
Mitsubishi	Bolzen / Studs	4 x 271 994 121
	Bolzen / Studs	6 x 271 804 014
Colt('92-'04)/Lancer('91-'03)/Carisma('95-'04)/Mirage('-02)	56 165 400 001	4x100 241e801 409
Colt('88-'92)('04-)/Lancer('88-'96)('03-'08)/Lancer Evo I-III('92-'95)/Space Wagon('83-'98)/Galant('85-'06)/Carisma('95-'04)/Space Runner('91-'98)/Space Star('98-'05)	67 165 400 002	4x114,3 241e801 409
Sigma('91-'95)/Diamante('90-'05)/L 300('-94)/L 400('94-'06)/ Delica('07-)/Eclipse('90-)/3000 GT('90-'00)/Space Gear('94-'06)/Pajero Pinin('98-'06)/Lancer Evo IV-X('96-)/ Space Runner('99-'02)/Space Wagon('99-'04)/ Outlander('03-)/Galant US-Version('97-)/Lancer(11/'03-)/Grandis('04-'10)/Endeavor('03-)/ASX('10-)	67 165 400 002	5x114,3 231 505 403
Raider('05-'09)	78 160 400 064	5x139,7 231 505 403
Pajero('00-)/Montero('00-'06)/Shogun('00-)/L 200('06-)	67 165 400 002	6x139,7 231 505 403
Pajero('82-'99)/Pajero Sport('95-'08)/L 200('-06)/L 300 4WD ('-06)/Montero('82-'99)/Montero Sport('97-'04)/Space Gear 4WD('94-'06)/Shogun('-99)	108 160 400 062	6x139,7 231 505 403
Canter T 35	132 150 400 091	6x170 150 400 091
Canter T 60	150 150 400 091	5x208 150 400 091
Canter T 75	164 150 400 091	6x222,25 150 400 091

S Service Info

Nissan / Infiniti

Zentriersatz
Nissan / Infiniti

Best-#:
280 400 107

Centering Kit
Nissan / Infiniti

Part-#:
280 400 107



165 400 001



165 400 002



160 400 055



160 400 064



160 400 062



241e801 409
4 x 271 994 121



251e408 400



231e505 403

6 x 271 804 014

S Service Info

Nissan / Infiniti

Zentriertabelle Centering Chart

Zentriersatz
Nissan / Infiniti
Best-#: 280 400 107

Centering Kit
Nissan / Infiniti
Part-#: 280 400 107

Felgendaten Vehicle Data	Mittenloch / Centerbore HAWEKA-#	Lochkreis / Bolt Circle HAWEKA-#
Nissan	Bolzen	4 x 271 994 121
100 NX('90-'95)/Pulsar(-'99)/Micra(-'03)/Sunny(-'99)/Sentra('87-'99)/Almera('95-'00)	59 165 400 001	4x100 241e801 409
Micra('03-)/Kubistar('97-'08)/Note('05-)	60 165 400 001	4x100 241e801 409
200SX, ZX(-'93)/240SX(-'93)/Primera('90-'02)/Prairie(-'98) /Almera('00-'06)/Pulsar('00-'05)/Laurel(-'97)/Silvia(-'93)/Sunny('00-'04)/Sentra('00-)/Altima('90-'01)/Tiida('04-)/Versa('04-)	66 165 400 002	4x114,3 241e801 409
Vanette(-'94)	70 165 400 002	4x114,3 241e801 409
200SX('93-'98)/240SX('93-'98)/Silvia('94-'02)/Laurel('97-'02)/Serena('91-)/Maxima('89-)/X-Trail('01-)/Almera Tino('00-'06)/350Z('03-'09)/370Z('08-)Primera('02-'07)/Altima('02-)/Vanette Cargo('95-'08)/300ZX('89-'00)/Quest('93-)/Murano/200SX/Qashqai/Rogue/Sentra SE-R ('07-)	66 165 400 002	5x114,3 231 505 403
Pathfinder ('05-)/Pick Up Navara(08/'05)/Frontier('05-)/Xterra('05-)	66 165 400 002	6x114,3
Titan('04-)/Armada('04-)	78 160 400 064	6x139,7 231 505 403
Urvan(-'10)/Pick-Up(-'04)/Frontier(-'04)/Xterra('00-'04)/Pathfinder US-Version('86-'04)	100 160 400 062	6x139,7 231 505 403
Safari(-'09)/Patrol(-'09)/Pathfinder ('95-'04)/Terrano II('88-'04)	110 160 400 062	6x139,7 231 505 403
Trade('94-'97)	70 165 400 002	5x160
Primastar('02-)	71 160 400 055	5x118 251 408 400

Infiniti		
G20('91-'02)/M30('90-'92)	66 165 400 002	4x114,3 241e801 409
G35,37('03-'06)/I30,35('96-'04)/J30('92-'97)/M35,45('03-)/ Q45('90-'06)/FX35,45('03-)/EX35,37('08-)	66 165 400 002	5x114,3 231 505 403
QX56('04-)	78 160 400 064	6x139,7 231 505 403
QX4,('97-'03)	100,5 160 400 062	6x139,7 231 505 403

S Service Info

Opel



160 400 017



160 400 063



160 400 008



240e101 402
4 x 270 804 014



251e615 400
5 x 271 804 003

Zentriersatz
Opel

Best-#:
280 400 080

Centering Kit
Opel

Part-#:
280 400 080

Zentriertabelle Centering Chart

Felgendaten Vehicle Data	Mittenloch / Centerbore HAWEKA-#	Lochkreis / Bolt Circle HAWEKA-#
Opel		
Astra(-`09) / Kadett / Corsa / Calibra / Vectra / Ascona / Tigra / Combo (-`11) / Meriva (-`10) / Adam / Karl	56,5 160 400 008	4x100 240e101 402
Omega / Senator / Calibra / Vectra / Speedster / Zafira (-`11) / Signum / Astra (-`09) / Meriva / Combo 1.7 CDTi (-`11) / Corsa	65 160 400 008	5x110 251 615 400
Sintra / Ampera / Astra (-`09) / Zafira (`12-) / Antara	70,2 160 400 017	5x115 251 615 400
Vivaro	71,1 160 400 017	5x118 251 615 400
Insignia	67 160 400 063	5x120 251 615 400
Astra (`09-) / Mokka	56,5 160 400 008	5x105 251 615 400

Porsche



160 400 074



160 400 065



251 901 409

Zentriersatz
Porsche

Best-#:
280 400 106

Centering Kit
Porsche

Part-#:
280 400 106

Zentriersatz
Porsche GT2 RS / GT3 7 GT3 RS
(nur für Zentralverschluss)

Best-#:
280 400 076

Centering Kit
Porsche GT2 RS / GT3 7 GT3 RS
(only for central lock)

Part-#:
280 400 076

Zentriertabelle Centering Chart

Felgendaten Vehicle Data	Mittenloch / Centerbore HAWEKA-#	Lochkreis / Bolt Circle HAWEKA-#
Porsche		
Alle Modelle / All models ('73-)/ Cayenne / Boxter / GT3 (996)/ 911 / 928 / Panamera	71,6	5 x 130 251 901 409
GT2 RS / GT3 / GT3 RS	84	Zentral / central
Macan	66,5	5x112 251 901 409

S Service Info

PSA (Peugeot / Citroen)

Zentriersatz
PSA
Best-#:
280 400 087

Centering Kit
PSA
Part-#:
280 400 087



165 400 001



165 400 002



165 400 003



150 400 091



241e 801 409
4 x 271 994 121



251e408 400
5 x 271 804 014



Option



405 xxx 108

Für geschlossene Felgen (3/4/5-Loch)
For closed rims (3/4/5-Hole)

Zentriertabelle Centering Chart

Felgendaten Vehicle Data	Mittenloch / Centerbore HAWEKA-#	Lochkreis / Bolt Circle HAWEKA-#
PSA (Peugeot / Citroen)	Bolzen / Studs	4 x 271 994 121
Peugeot	Bolzen / Studs	5 x 271 804 014
107	54 165 400 001	4x100 241e801 409
106/205/206/207/305/306/307/309/405/406/ 1007/Partner	65 165 400 002	4x108 241e801 409
205 GTI 1.6 (Alu)/206CC/307SW(3/02-)	65 165 400 002	4x108 241e801 409
806 (Alu)	65 165 400 002	5x98 251 408 400
806/Expert/807	58 165 400 001	5x98 251 408 400
605 ('89-)/ 607/407	65 165 400 002	5x108 251 408 400
Boxer	71 165 400 003	5x118 251 408 400
J 5	72 165 400 003	5x118 251 408 400
J 7/J 9	142 150 400 091	5x190 150 400 091

S Service Info

PSA (Peugeot / Citroen)

Zentriersatz
PSA
Best-#:
280 400 087

Centering Kit
PSA
Part-#:
280 400 087



165 400 001



165 400 002



165 400 003



150 400 091



241e 801 409
4 x 271 994 121



251e408 400
5 x 271 804 014



Option
405 xxx 108
Für geschlossene Felgen (3/4/5-Loch)
For closed rims (3/4/5-Hole)

Zentriertabelle Centering Chart

Felgendaten Vehicle Data	Mittenloch / Centerbore HAWEKA-#	Lochkreis / Bolt Circle HAWEKA-#
PSA (Peugeot / Citroen)	Bolzen / Studs	4 x 271 994 121
Citroen	Bolzen / Studs	5 x 271 804 014
AX('87-'97)/Monpti('-90)	55 165 400 001	3x98
Nemo('08-)	58 165 400 001	4x98 241e801 409
C1('05-)	54 165 400 001	4x100 241e801 409
BX('82-'94)/ZX('91-'98)/Xantia('93-'01)/Xsara('97-'06)/Xsara Picasso('00-'09)/Berlingo('96-)/Saxo('96-'03)/AX 1.4, 1.4GTI('91-'97)/C2('03-'10)/C3('02-)/C3 Pluriel('03-)/C3 Picasso('09-)/C4('04-)/C4 Picasso('06-)/C4 Grand Picasso('06-)/C5('01-)/DS3('10-)	65 165 400 002	4x108 241e801 409
C5('01-)/C3('02-)/C3 Pluriel('03-)/C3 Picasso('09-)	65 165 400 002	4x108 241e801 409
C-Crosser('07-)	67 165 400 002	5x114,3 251 408 400
Evasion('94-'02)/Synergie('94-'02)/CX('-91)/C8('02-)/Jumpy('-09/'06)	58 165 400 001	5x98 251 408 400
XM('89-'00)/C5('04-)/C6('05-)/Jumpy(10/'06-)	65 165 400 002	5x108 251 408 400
Jumper2 ('94-)	71 165 400 003	5x118 251 408 400
C25 ('84-'94)	72 165 400 003	5x118 251 408 400

S Service Info

Renault / Dacia



160 400 055



240 101 400



251 408 400

Zentriersatz
Renaut / Dacia

Best-#:
280 400 079

Centering Kit
Renaut / Dacia

Part-#:
280 400 079

Zentriertabelle Centering Chart

Felgendaten	Mittenloch / Centerbore	Lochkreis / Bolt Circle
Vehicle Data	HAWEKA-#	HAWEKA-#
Renault		
Bellevue / Champion / Elysée / Fuego / Espace(-12/96) / Safrane('93-'96) Rapid / Clio / Twingo / Megane/Laguna(-02/'01) / Spider / Mégane II(10.02-) / R5/R19('89-'95) / R21('86-'94) / R25 / Alpine / Modus / Thalia	60 mm 160 400 055	4x100 240 101 402
Safrane('96-'01) / Laguna(03/'01-) / Grand Espace / Espace(01'97-) / Avantime(09/'01-) / Vel Satis / Scenic / RX4 / RX5 / RX2.0i / 1,9dCi / Clio V6 / Mégane II (07/'05-)	60 mm 160 400 055	5x108 251 408 400
Laguna T / Koleos	66mm 160 400 055	5x114,3 251 408 400
Trafic (6/'01-)	71mm 160 400 055	5x118 251 408 400
Dacia		
Logan / Logan MCV / Sandero	60mm 160 400 055	4x100 240 101 402
Duster	66mm 160 400 055	5x114,3 251 408 400

S Service Info

Rolls Royce / Bentley

Zentriersatz
Rolls Royce / Bentley

Best-#:
280 400 101

Centering Kit
Rolls Royce / Bentley

Part-#:
280 400 101



160 400 028 160 400 031 5x273e008 006 259 010 400

Zentriertabelle Centering Chart

Felgendaten Vehicle Data	Mittenloch / Centerbore HAWEKA-#	Lochkreis / Bolt Circle HAWEKA-#
Rolls Royce		
Alle Modelle/all models ('97-)	73 160 400 031	5x120 259 010 400
Silver Cloud/Phantom	-	5x139,7 259 010 400
Alle Modelle/all models (-'96)	117,5 160 400 028	5x154,95 259 010 400
Bentley		
Arnage('98-'01)/Arnage Red Label('99-'02)/Arnage R('02-'09) /Arnage RL('02-'09)/Arnage T('02-'09)/Continental('-02)/ Azure('06-)/Brooklands('07-)	72,5 160 400 031	5x120 259 010 400
Alle Modelle/all models('-98)/Azure('-03)	117,5 160 400 028	5x154,95 259 010 400
Continental GT('03-)/Continental GT Speed('07-)/Continental GTC('06-)/Continental Flying Spur('05-)	57 160 400 031	5x112 259 010 400

S Service Info

Saab / Volvo




165 400 001



165 400 002



241e801 409
4 x 271 994 121



5x273e008 006



259 010 400

Zentriersatz
Saab / Volvo

Best-#:
280 400 102

Centering Kit
Saab / Volvo

Part-#:
280 400 102

Zentriertabelle Centering Chart

Felgendaten	Mittenloch / Centerbore	Lochkreis / Bolt Circle
Vehicle Data	HAWEKA-#	HAWEKA-#
Saab	Bolzen / Studs	4 x 271 994 121
9000/900 ('88-'92)	65 165 400 002	4x108 241e801 409
9-2X	56 165 400 001	5x100 259 010 400
900 ('93-'98)/9-3/9-5/Aero	65 165 400 002	5x110 259 010 400
Volvo		
850 (-'93)	65 165 400 002	4x108 241e801 409
S40 (-12/03)/V40	67 165 400 002	4x114,3 241e801 409
C30/C70('06-)/S40(01/04-)/S80('06-)V50/ V70('08-)/XC60/ XC70('08-)	63,3 165 400 002	5x108 259 010 400
850 ('94-)/200/700/900/C70(-'05)/S40(01/04-)/V50/S60/ S60D/S70/V70(-'07)/XC70(-'07)/V70 Bi- Fuel/S80(-'05)/ S90/V90/XC90	65 165 400 002	5x108 259 010 400

Skoda



150 400 111



251 901 409



241 801 409

Zentriersatz
Skoda

Best-#:
280 400 137

Centering Kit
Skoda

Part-#:
280 400 137

Zentriertabelle Centering Chart

UNION GMM	Center Bore	Bolt Circle
SKODA		
Favorit / Forman / Pick-Up (-7/93)	58,5	4x98
Felicia / Favorit / Forman / Pick-Up (8/93-) / Vanplus / Citigo	57,1	4x100
Fabia / Fabia II / Octavia / Roomster / Rapid	57,1	5x100
Superb (3T 7 3U) / Yeti / Octavia II / III	57,1	5x112

Subaru

Zentriersatz
Subaru

Best-#:
280 400 128

Centering Kit
Subaru

Part-#:
280 400 128



150 400 111



241e801 409



251e901 409

5 x 271 994 121

Zentriertabelle Centering Chart

	Centerbore	Bolt Circle
Vehicle Data	HAWEKA-#	HAWEKA-#
Subaru	Bolzen / Studs	5 x 271 994 121
Libero/Justy (-09/95), (09/03-)/G3X	56 150 400 111	4x100 241e801 409
Justy (10/95-08/03)	60 150 400 111	4x114,3 241e801 409
Legacy/Impreza/Forester/Impreza WRX STI (-'04)/ Outback ('95-) /Baja ('03-)	56 150 400 111	5x100 251e901 409
SVX/Streega/B9 Tribeca/Impreza WRX STI ('05-)	56 150 400 111	5x114,3 251e901 409

S Service Info

Suzuki



165 400 001



165 400 002



160 400 062



241e801 409



251e901 409

5 x 271 994 121

Zentriersatz
Suzuki

Best-#:
280 400 104

Centering Kit
Suzuki

Part-#:
280 400 104

Zentriertabelle Centering Chart

Felgendaten	Mittenloch / Centerbore	Lochkreis / Bolt Circle
Vehicle Data	HAWEKA-#	HAWEKA-#
Suzuki	Bolzen	5 x 271 994 121
Baleno/Wagon R+/Ignis/Liana/Swift (09/03-)/Aerio ('02-)/ Esteem ('95-)/Alto (05/02-)	54 165 400 001	4x100 241e801 409
Carry I, Carry II	68 165 400 002	4x114,3 241e801 409
Reno/Forenza/Verona	57 165 400 001	4x114,3 241e801 409
Swift (-08/03)/Alto (-12/00)	60 165 400 001	4x114,3 241e801 409
Grand Vitara('06-)	60 165 400 001	5x114,3 251e901 409
SX4	60 165 400 001	5x114,3 251e901 409
LJ 80/SJ 410/Vitara/SJ Samurai/X 90/Grand Vitara (-'05)/ XL-7/Jimny/Sidekick ('89-)/Sierra	108 160 400 062	5x139,7 251e901 409

S Service Info

Toyota / Lexus



160 400 012



160 400 063



160 400 053



251e306 400
4x100
5x120 / 150



231e301 403
5x100 / 114,3
6x139,7

6 x 271 994 025

Zentriersatz
Toyota / Lexus

Best-#:
280 400 129

Centering Kit
Toyota / Lexus

Part-#:
280 400 129

Zentriertabelle Centering Chart

Felgendaten Vehicle Data	Mittenloch / Centerbore HAWEKA-#	Lochkreis / Bolt Circle HAWEKA-#
Toyota		
Carina(-03/92)/Starlet/Corolla/Tercel/Paseo/Yaris/Yaris II/Yaris Verso/Corolla Verso (-06/04)/Echo (03/90-)/MR2 ('01-)/Celica (-03/94)/Aygo/iQ	54 160 400 012	4x100 251e306 400
Carina (04/92-)/Camry (-04/92)/Avensis/Avensis II/Celica (04/94-)/Matrix/Prius/Urban Cruiser	54 160 400 012	5x100 231e301 403
MR 2 ('91-'00)/Camry (05/92-)/PicNic/RAV 4 II/Supra/Previa/Previa II/MR2 Turbo/Avensis 2.2D-4D, 2.2D-CAT/Avensis Verso/Highlander/Sienna/Avalon/Solara/ Corolla Verso (07/04-)/Harrier/Auris	60 160 400 012	5x114,3 231e301 403
LiteAce/HiAce H10/Dyna 100/Funcruiser (RAV 4) /HiLux 2WD/Tacoma 2WD/Tacoma X-Runner 2WD	67 160 400 063	5x114,3 231e301 403
Landcruiser 100,105/Landcruiser Amazon	110 160 400 053	5x150 251e306 400
HiAce (11/95-)	67 160 400 063	6x139,7 231e301 403
HiLux Surf/Landcruiser 3.0 TD/Tacoma 4WD/T-100 ('93-'98)/Tacoma PreRunner 2WD	106 160 400 053	6x139,7 231e301 403
Landcruiser/4Runner/HiLux 4x4/ Tundra/Sequoia	110 160 400 053	6x139,7 231e301 403

S Service Info

Toyota / Lexus



160 400 012



160 400 063



160 400 053



251e306 400
4x100
5x120 / 150



231e301 403
5x100 / 114,3
6x139,7

6 x 271 994 025

Zentriersatz
Toyota / Lexus

Best-#:
280 400 129

Centering Kit
Toyota / Lexus

Part-#:
280 400 129

Zentriertabelle Centering Chart

Vehicle Data	Centerbore HAWEKA-#	Bolt Circle HAWEKA-#
Lexus		
LS('89-'06)/IS('98-)/IS-F('07-)/ES('92-)/ RX('97-)/GS('91-)/ SC('91-'10)	60 160 400 012	5x114,3 231e301 403
LS('07-)	60 160 400 012	5x120 251e306 400
LX ('98-)	110 160 400 053	5x150 251e306 400

i Service Info

VW / Audi Profi



VAS 6685
ASE 422 151 00 000



VAS 6686
ASE 422 152 00 000



VAS 6687
ASE 422 153 00 000



VAS 6243
ASE 422 062 00 000



VAS 6242
ASE 422 061 00 000

Zentriersatz
VW / Audi

Best-#:
280 400 130

Centering Kit
VW / Audi

Part-#:
280 400 130

Zentriertabelle Centering Chart

FAHRTZEUGE GMM	Center Bore	Bolt Circle	HWK-#	VAS-#
AUDI				
80 / 90 / 100 (-'91)	57,1	4x108	150 400 111	6242
90 ('92)	57,1	4x108	150 400 111	6242
A1 / A2 (>2005) / A3 (>2003) / TT (>2006)	57,1	5x100	150 400 111	6242
A3 (>2012) / A4 (>2007) / A6 (>2010) / A8 (>2009) R / R8 Spyder / R8 GT / TT (2007>) / Q3 / A3 (2013>)	57,1	5x112	150 400 111	6242
Q7	71,6	5x130	150 400 113	6243
A4 (2008>) / A5 / A6 (2011>) / Q5 / A8 (2010>) / R5 / A7	66,5	5x112	150 400 112	6243
VW				
Polo (>10/01) / Golf I, II, III, IV, Cabrio / Passat (>12/96) / Lupo / Jetta / Vento / Caddy (>2003) / Corrado / Scirocco I, II / Up!	57,1	4x100	150 400 111	6242
Vento VR6 / Corrado VR6 / Golf III, IV / Bora / Jetta Polo (11/01>) New Beetle / Passat (>12/96) / Fox	57,1	5x100	150 400 111	6243
T4 / Caravelle / Sharan / Passat (>9/96) / Passat R / Phaeton / Touran / Gold V,VI,VII. R / Passat CC / Tiguan	57,1	5x112	150 400 111	6243
T2 / T3 / Caravelle (>90)	66,6	5x112	150 400 112	6243
Taro	67	5x114,3	150 400 112	6243
Touareg 16" / T5	65,1	5x120	150 400 112	6243
Touareg 17"-19"	71,6	5x130	150 400 113	6243
Touareg Model 2011 – 20"-21" (*)	71,6	5x130	150 400 113	6243

i Service Info

VW / Audi Eco



150 400 111



150 400 112



150 400 113



VAS 6243
ASE 422 062 00 000



VAS 6242
ASE 422 061 00 000

Zentriersatz
VW / Audi

Best-#:
280 400 131

Centering Kit
VW / Audi

Part-#:
280 400 131

Zentriertabelle Centering Chart

FAHRZEUGE GMM	Center Bore	Bolt Circle	HWK-#	VAS-#
AUDI				
80 / 90 / 100 (<'91)	57,1	4x108	150 400 111	6242
90 (<'92)	57,1	4x108	150 400 111	6242
A1 / A2 (>2005) / A3 (>2003) / TT (>2006)	57,1	5x100	150 400 111	6242
A3 (>2012) / A4 (>2007) / A6 (>2010) / A8 (>2009) R / R8 Spyder / R8 GT / TT (2007>) / Q3 / A3 (2013>)	57,1	5x112	150 400 111	6242
Q7	71,6	5x130	150 400 113	6243
A4 (2008>) / A5 / A6 (2011>) / Q5 / A8 (2010>) / R5 / A7	66,5	5x112	150 400 112	6243
VW				
Polo (>10/01) / Golf I, II, III, IV, Cabrio / Passat (>12/96) / Lupo / Jetta / Vento / Caddy (>2003) / Corrado / Scirocco I, II / Up!	57,1	4x100	150 400 111	6242
Vento VR6 / Corrado VR6 / Golf III, IV / Bora / Jetta Polo (11/01>) New Beetle / Passat (>12/96) / Fox	57,1	5x100	150 400 111	6243
T4 / Caravelle / Sharan / Passat (>9/96) / Passat R / Phaeton / Touran / Gold V,VI,VII. R / Passat CC / Tiguan	57,1	5x112	150 400 111	6243
T2 / T3 / Caravelle (>90)	66,6	5x112	150 400 112	6243
Taro	67	5x114,3	150 400 112	6243
Touareg 16" / T5	65,1	5x120	150 400 112	6243
Touareg 17"-19" Touareg Model 2011 – 20"-21" (*)	71,6	5x130	150 400 113	6243